


PRIME DESIGN™

A Safe Fleet Brand

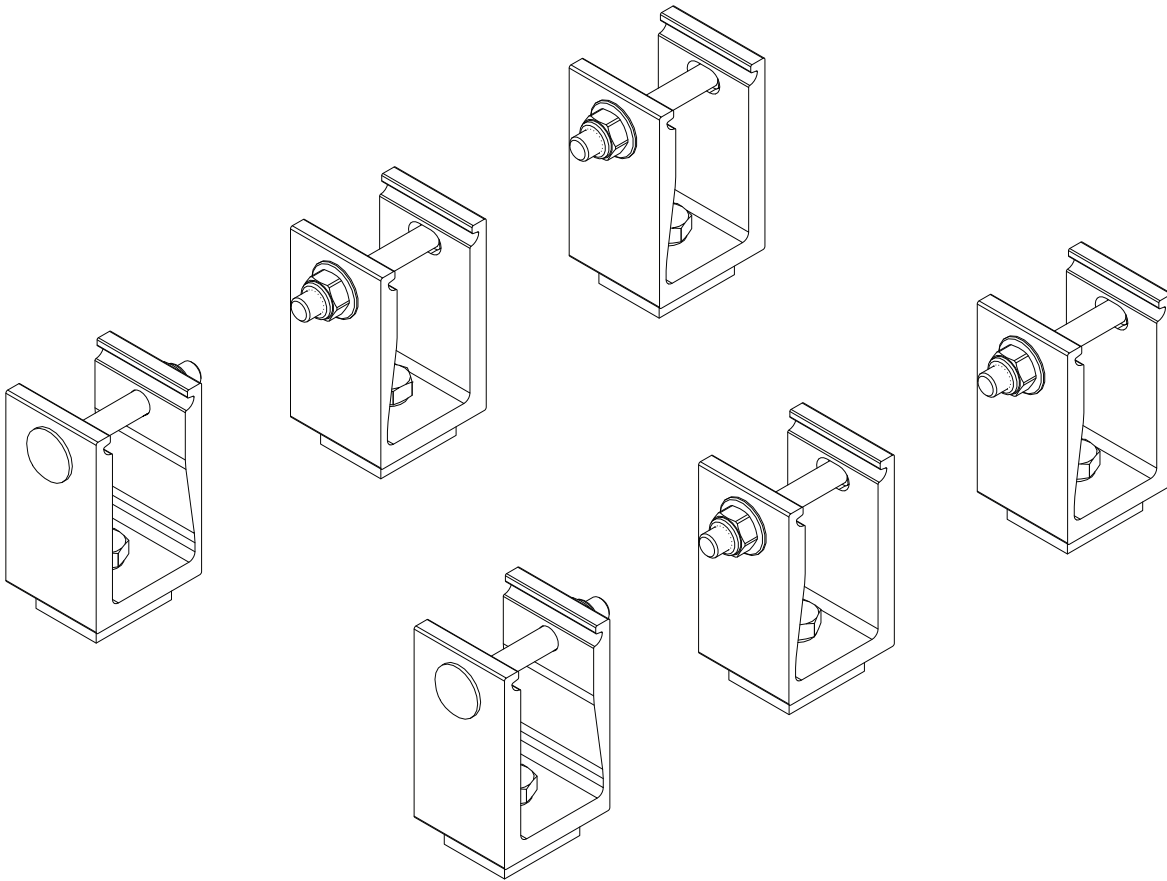

PRIME DESIGN RACK FBM-1009

2007+ Freightliner Sprinter w/Factory Channel Base Mounting Kit

| | |
|--------|------------------------------------|
| Page 2 | Packaging Contents |
| Page 3 | Universal FBM Assembly |
| Page 4 | ErgoRack Mounting (all wheelbases) |
| Page 5 | AluRack L2H1 |
| Page 6 | AluRack L2H2 |
| Page 7 | AluRack L3H2/L4H2 |


PRIME DESIGN, A SAFE FLEET BRAND

Address: 580 Opperman Drive, Eagan, MN 55123 • Toll Free: 1.8.PRIME.RACK
Fax: 651-552-1799 • Email: info@primedesign.net • Website: www.primedesign.net


CONTENTS OVERVIEW

TWO & THREE CROSSBAR CONFIGURATIONS

NOTE: This Manual contains information covering two and three Crossbar configurations. If your model is a two Crossbar configuration (ErgoRack only), disregard all Center Crossbar installation information.

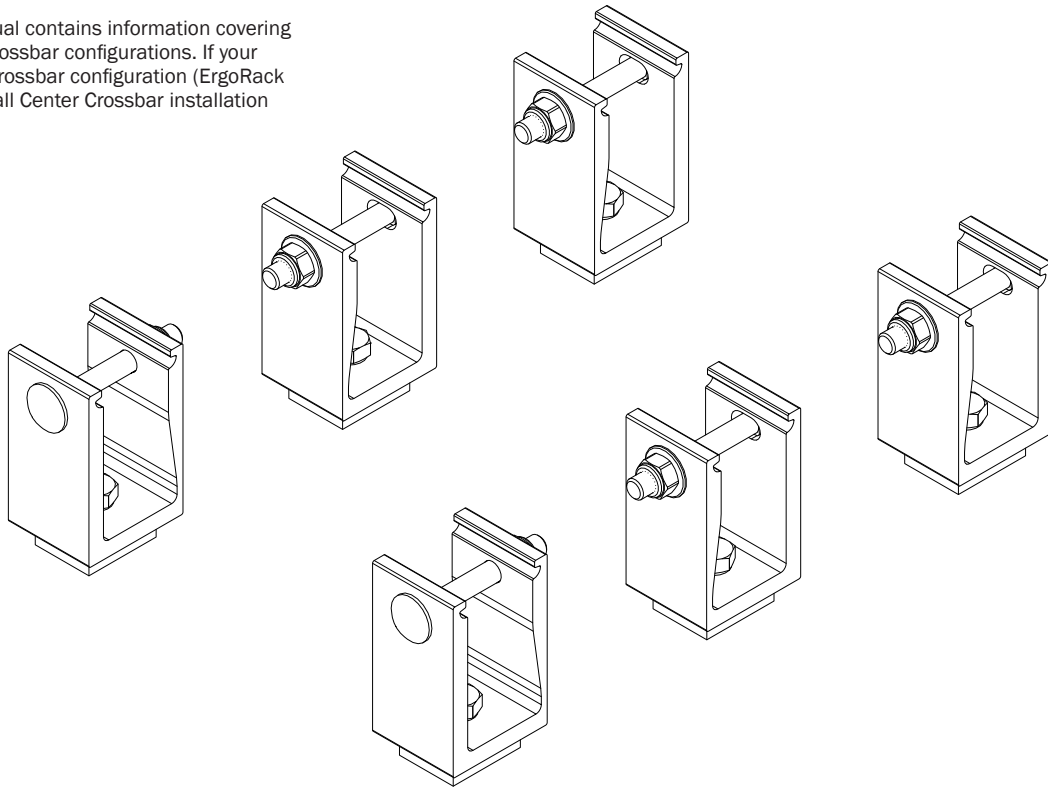


1—FBM-1009-BLK..... (Qty 1)
Channel Mounting Brackets

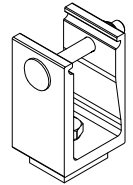


Mounting Brackets (6X)

2—Crossbars (shown for illustrative purposes only)
Ordered separately

ErgoRack, Gen4

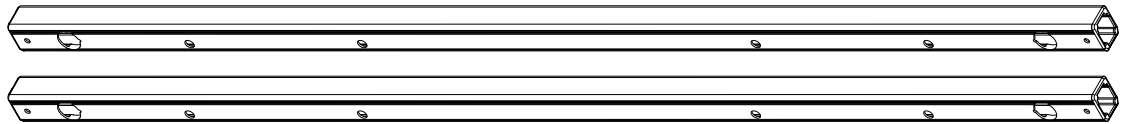


AluRack

 

FBM ASSEMBLY SEQUENCE

NOTE: Base Mounting Channels are not included with this FBM Kit. Channels shown are OEM, and supplied by vehicle manufacturer, and are for illustrative purposes only.

To purchase non-OEM Channels, please contact your authorized distributor, or a Prime Design Sales & Service Representative.

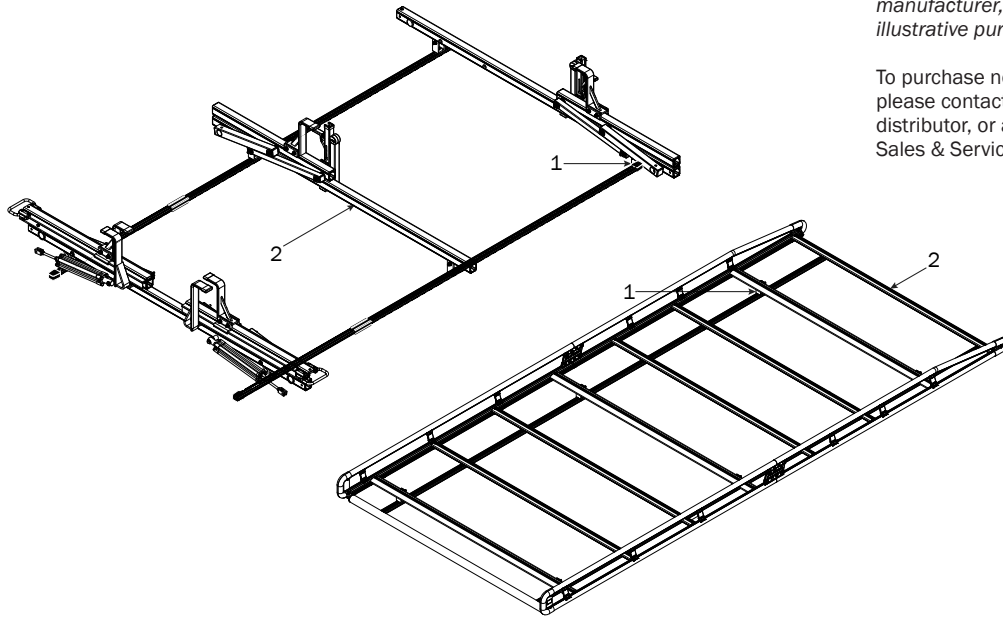


NOTE: Base, Rotation, Crossbar, and Side Rail features are shown for illustrative purposes only. These features are not included with this Base Mounting Kit, and must be purchased separately.

MOUNTING BRACKETS

1.1 Remove OEM Rear Channel End Caps, and slide three Mounting Brackets into each end of the OEM Channels.

NOTE: If installing the ErgoRack 2 Crossbar model, see Page 8 AFTER installing all Mounting Brackets.

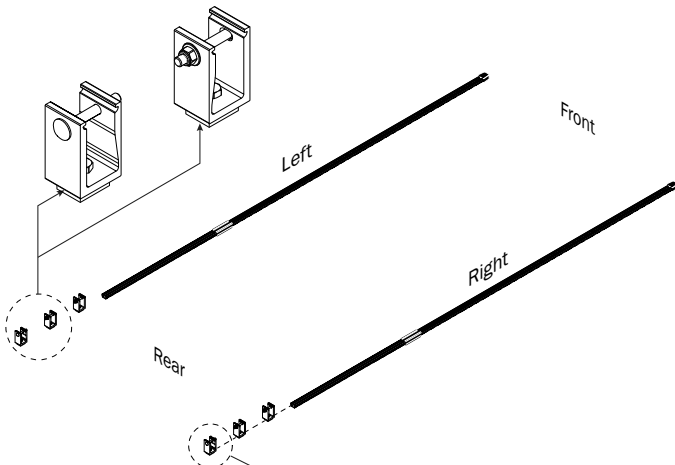

1.2


Loosen bolt to allow strip nut to freely slide into the opening of each OEM Channel


1.3

Replace the End Caps, then set to distances shown below:

Use Dimensions A for 2 Crossbar models (ErgoRack only).
Use Dimensions B for 3 Crossbar models. (ErgoRack & AluRack)

Do not torque the Crossbar Mounting Brackets until Step 2.4. Finger-tighten them into designated dimension to hold them in place, then proceed to your Feature (FEA) Assembly Manual.

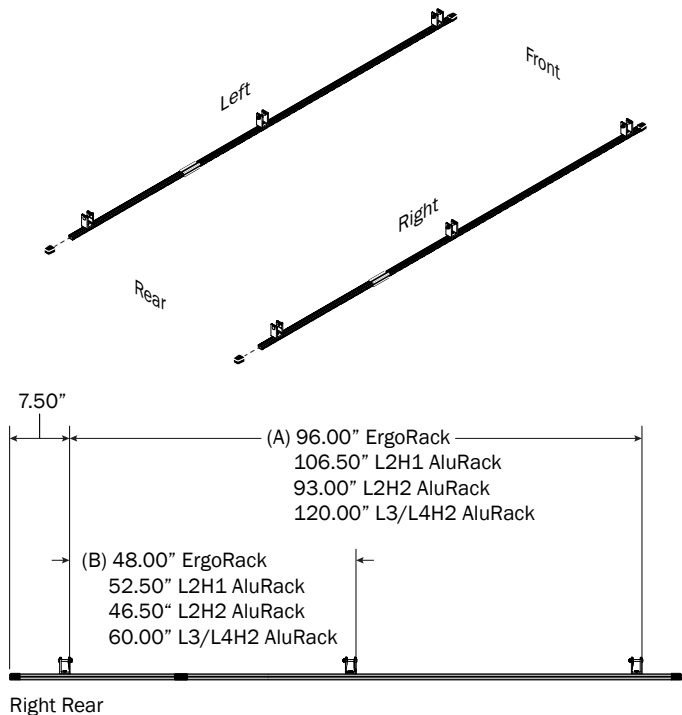

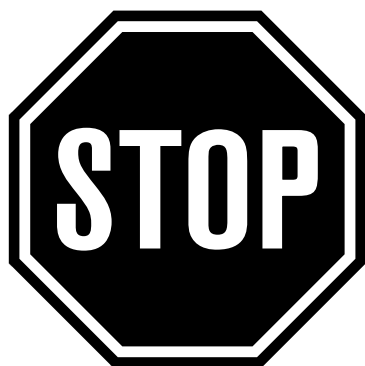

Do not mount the Crossbars to this FBM system at this time.


Refer to the respective FEA or AR Assembly Manual(s) included with your chosen rack configuration features. Depending upon the features chosen, you may need to perform a complete feature assembly onto the Crossbars or Side Rails as noted in that feature's Assembly Manual.

WARNING: Failure to position the Crossbars as shown in this FBM Assembly Manual may result in damage to the sliding door and/or ladder rack.


NOTE: Crossbars, Side Rails, Base, Clamp Down, or Rotation features are not included in this FBM kit, and must be purchased separately. To purchase applicable features and accessories, please contact your authorized distributor, or a Prime Design Sales & Service Representative.

CROSSBARS (ERGORACK)

Shown with LH Base, and RH Rotation for illustrative purposes only

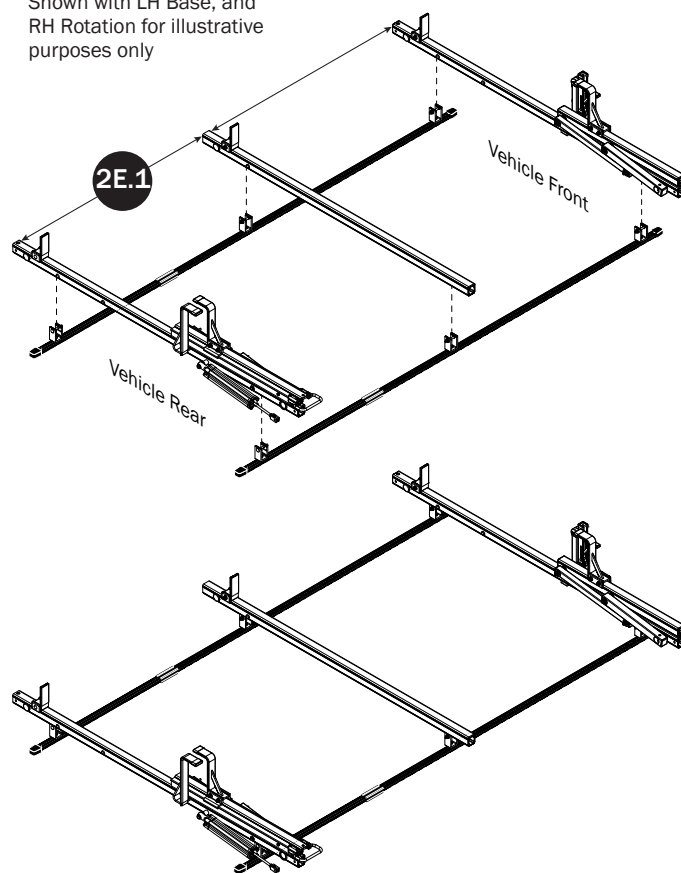



CROSSBAR ADJUSTMENT

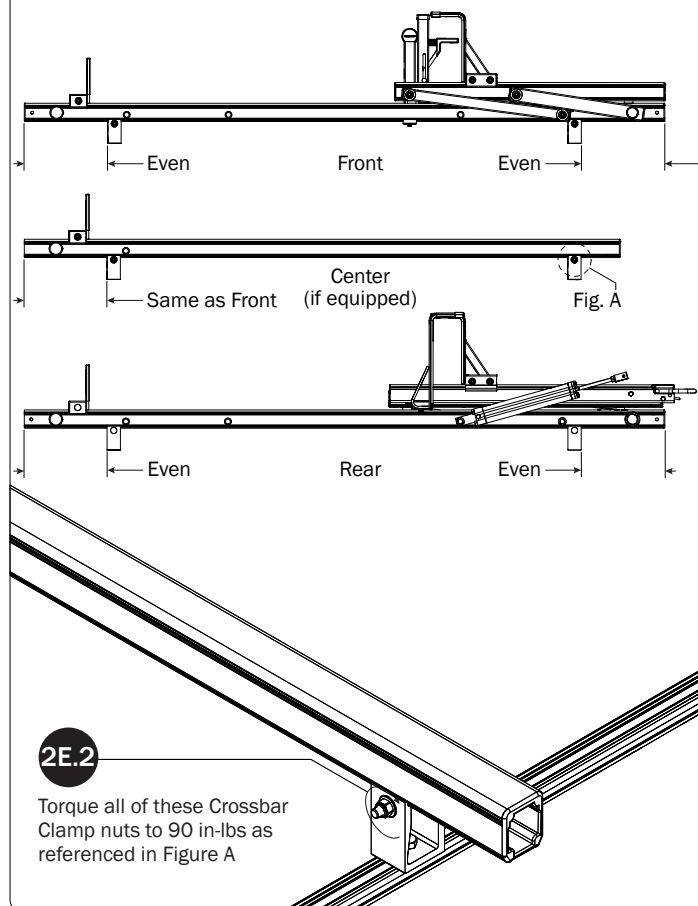

Torque all of these Crossbar Clamp nuts to 90 in-lbs as referenced in Figure A


2E.3

Verify the specified distance from the ends of both Mounting Bracket to the ends of both Channels.

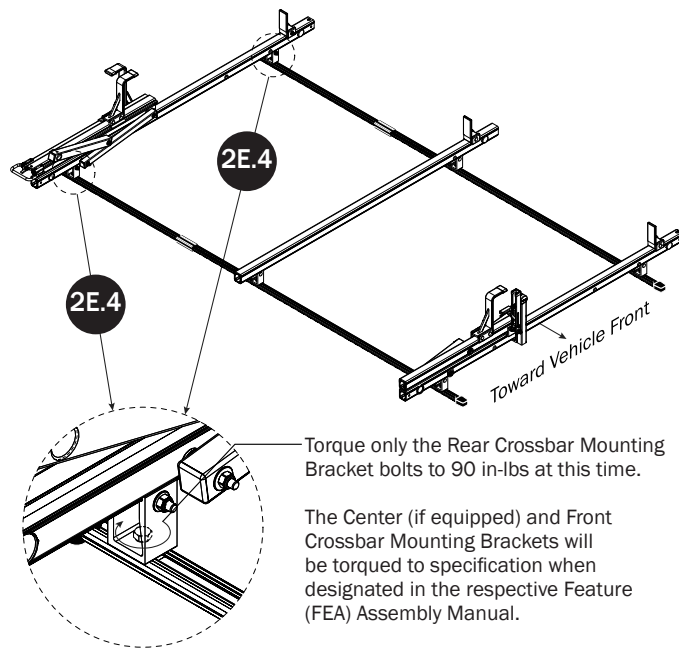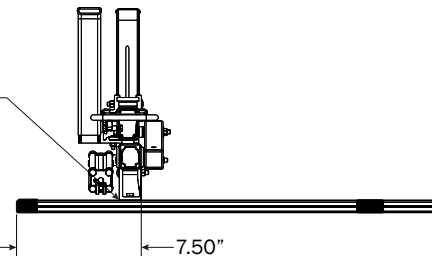

Torque only the Rear Crossbar Mounting Bracket bolts to 90 in-lbs at this time.

The Center (if equipped) and Front Crossbar Mounting Brackets will be torqued to specification when designated in the respective Feature (FEA) Assembly Manual.

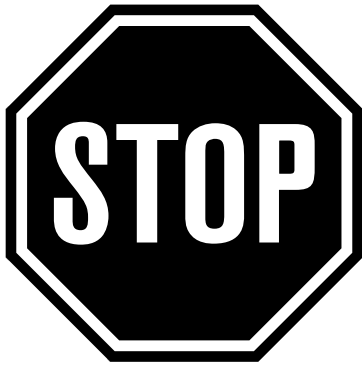

Do not mount the Crossbars to this FBM system at this time.


Refer to the respective FEA or AR Assembly Manual(s) included with your chosen rack configuration features. Depending upon the features chosen, you may need to perform a complete feature assembly onto the Crossbars or Side Rails as noted in that feature's Assembly Manual.

WARNING: Failure to position the Crossbars as shown in this FBM Assembly Manual may result in damage to the sliding door and/or ladder rack.


NOTE: Crossbars, Side Rails, Base, Clamp Down, or Rotation features are not included in this FBM kit, and must be purchased separately. To purchase applicable features and accessories, please contact your authorized distributor, or a Prime Design Sales & Service Representative.

CROSSBARS (ALURACK L2H1)

Shown with L2H1 AluRack for illustrative purposes only

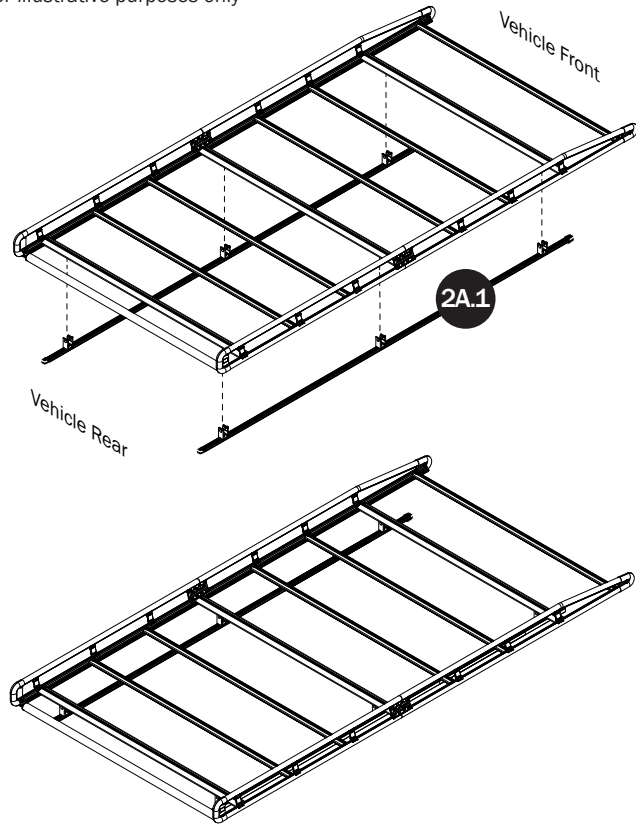



CROSSBAR ADJUSTMENT

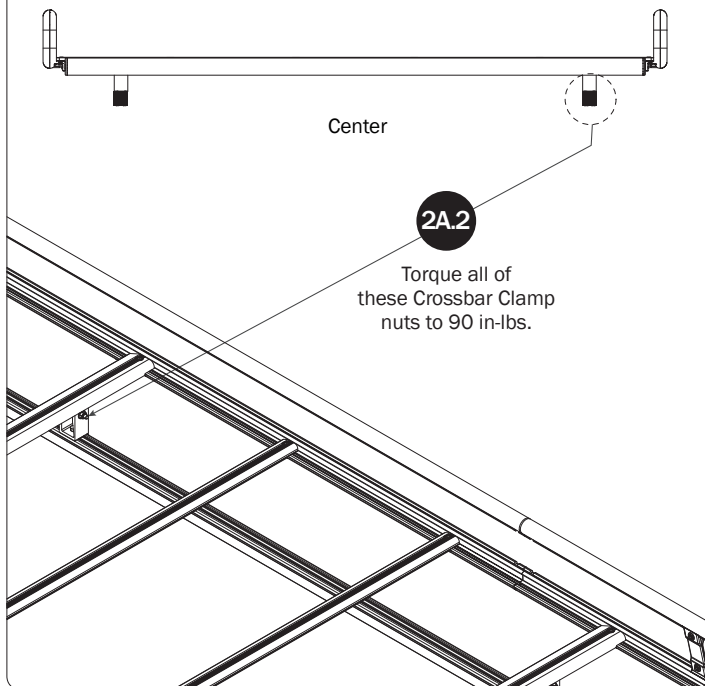


Torque all of these Crossbar Clamp nuts to 90 in-lbs.

2A.3

Verify the specified distance from the ends of both Mounting Bracket to the ends of both Channels.

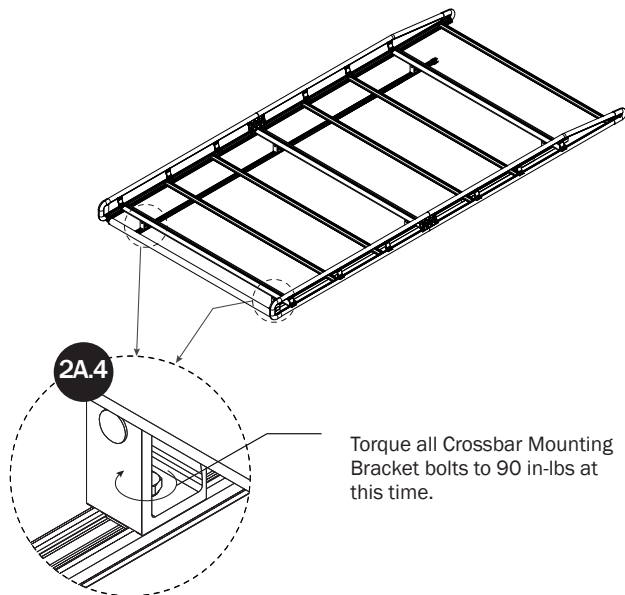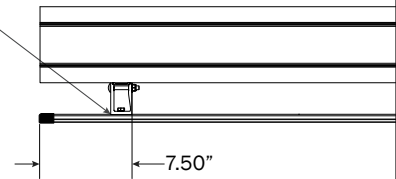

Torque all Crossbar Mounting Bracket bolts to 90 in-lbs at this time.

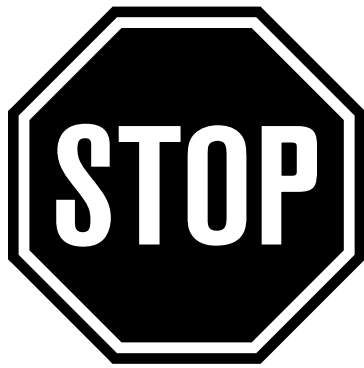

Do not mount the Crossbars to this FBM system at this time.


Refer to the respective FEA or AR Assembly Manual(s) included with your chosen rack configuration features. Depending upon the features chosen, you may need to perform a complete feature assembly onto the Crossbars or Side Rails as noted in that feature's Assembly Manual.

WARNING: Failure to position the Crossbars as shown in this FBM Assembly Manual may result in damage to the sliding door and/or ladder rack.


NOTE: Crossbars, Side Rails, Base, Clamp Down, or Rotation features are not included in this FBM kit, and must be purchased separately. To purchase applicable features and accessories, please contact your authorized distributor, or a Prime Design Sales & Service Representative.

CROSSBARS (ALURACK L2H2)

Shown with L2H2 AluRack for illustrative purposes only

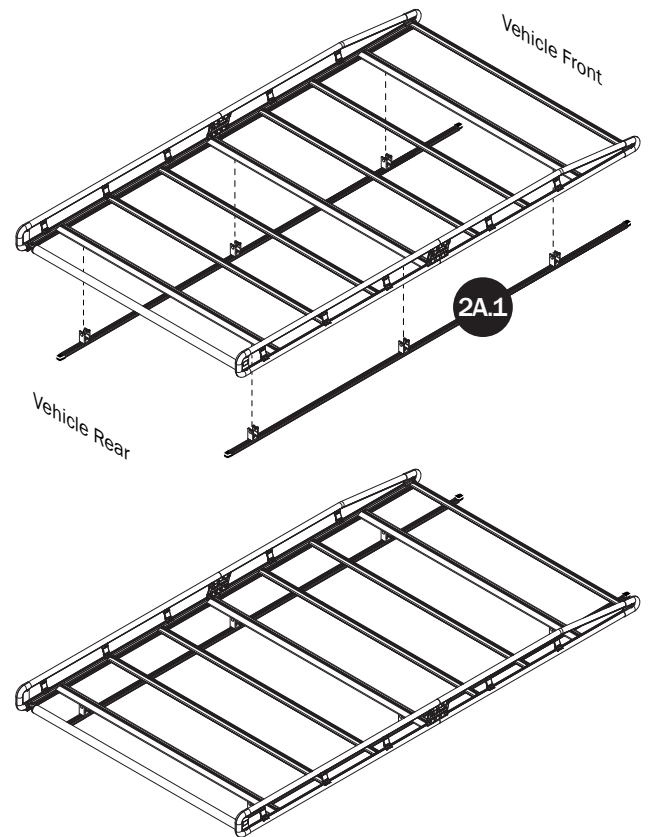

CROSSBAR ADJUSTMENT

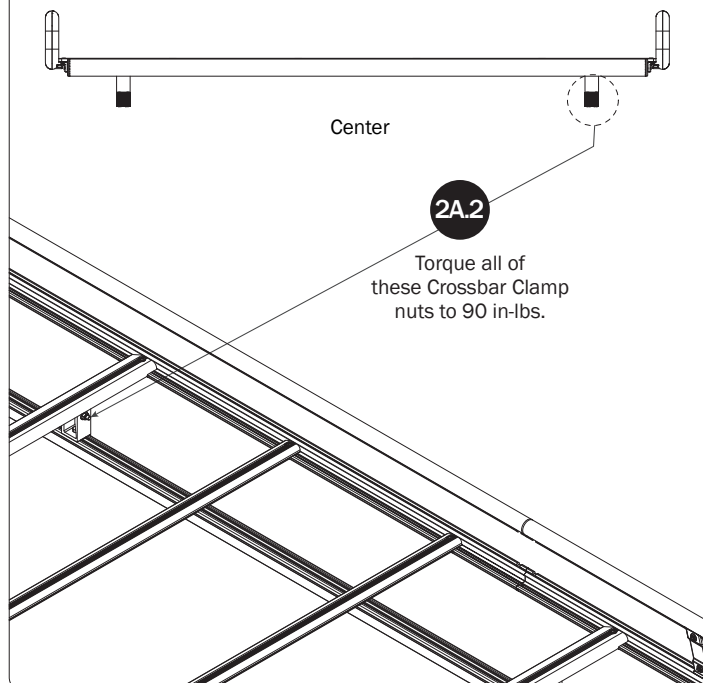

Center

2A.2

Torque all of these Crossbar Clamp nuts to 90 in-lbs.


2A.3

Verify the specified distance from the ends of both Mounting Bracket to the ends of both Channels.

7.50"

2A.4

Torque all Crossbar Mounting Bracket bolts to 90 in-lbs at this time.

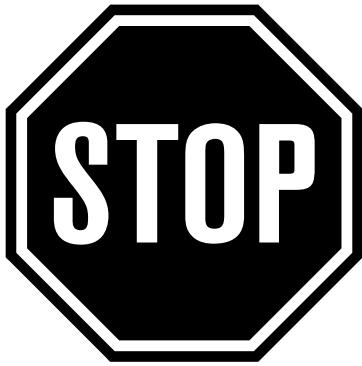

Do not mount the Crossbars to this FBM system at this time.


Refer to the respective FEA or AR Assembly Manual(s) included with your chosen rack configuration features. Depending upon the features chosen, you may need to perform a complete feature assembly onto the Crossbars or Side Rails as noted in that feature's Assembly Manual.

WARNING: Failure to position the Crossbars as shown in this FBM Assembly Manual may result in damage to the sliding door and/or ladder rack.


NOTE: Crossbars, Side Rails, Base, Clamp Down, or Rotation features are not included in this FBM kit, and must be purchased separately. To purchase applicable features and accessories, please contact your authorized distributor, or a Prime Design Sales & Service Representative.

CROSSBARS (ALURACK L3/L4)

Shown with L4H2 AluRack for illustrative purposes only

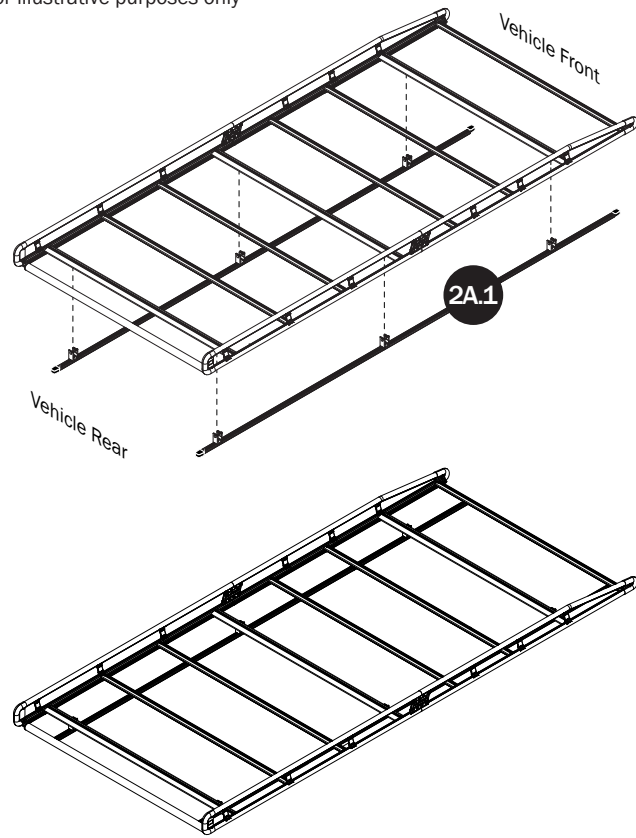

CROSSBAR ADJUSTMENT

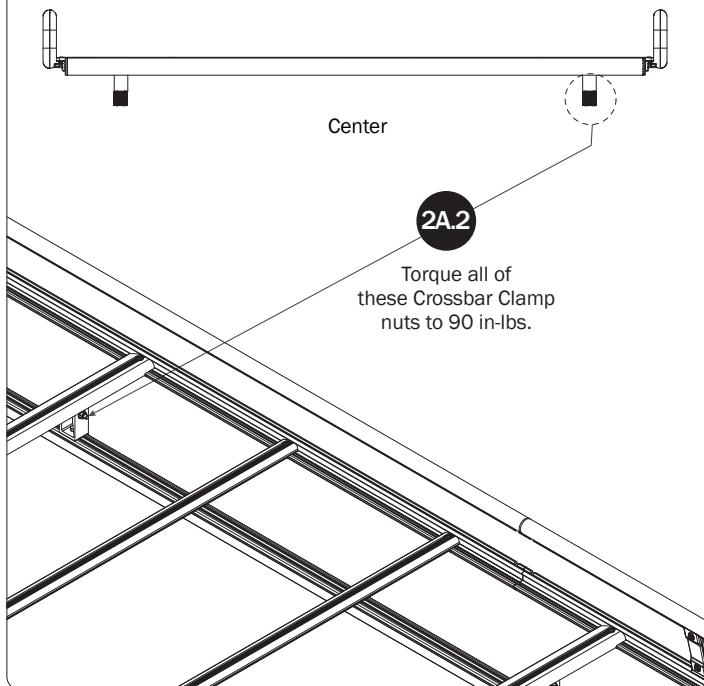


Center

2A.2


Torque all of these Crossbar Clamp nuts to 90 in-lbs.

2A.3

Verify the specified distance from the ends of both Mounting Bracket to the ends of both Channels.

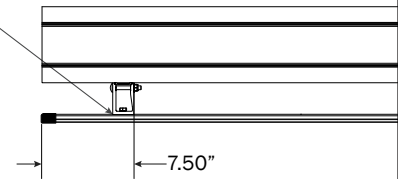

7.50"


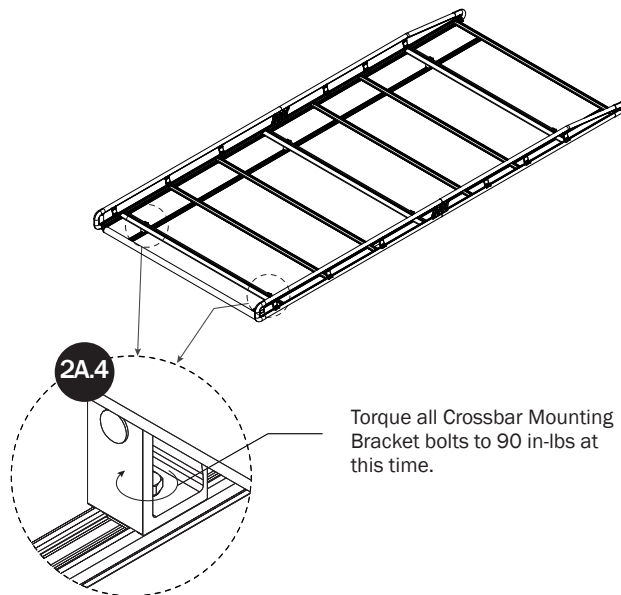


2A.4

Torque all Crossbar Mounting Bracket bolts to 90 in-lbs at this time.


CENTER CROSSBAR MOUNTS FOR 2 CROSSBAR ERGORACK MODELS ONLY

 Where applicable, remove the remaining center Crossbar Mount Hardware if desired.

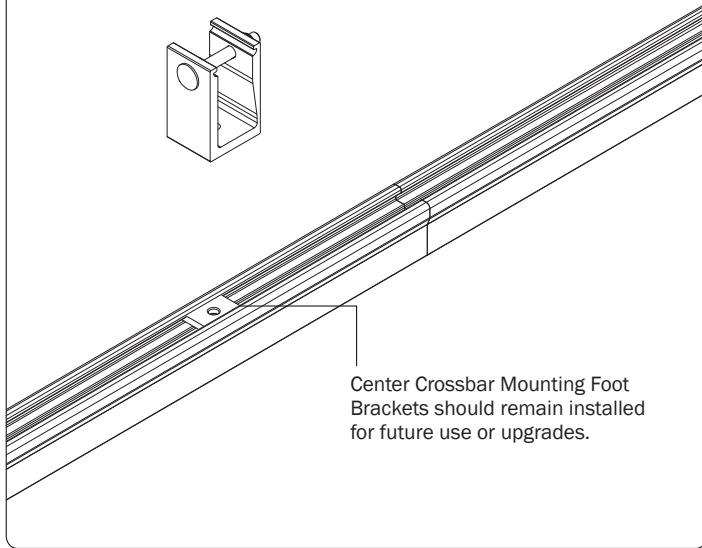

Center Crossbar Mounting Foot Brackets should remain installed for future use or upgrades.

Place the center Crossbar Mounts into the vehicle's glove box for future use.

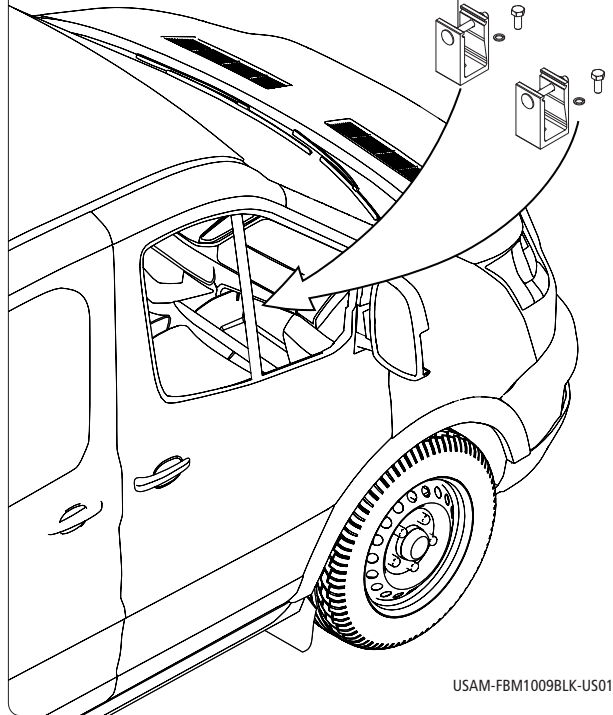

USAM-FBM1009BLK-US01 Rev-A 1019