

# ErgoRack

For Open Service Body

**PRIME DESIGN**<sup>TM</sup>

A Safe Fleet Brand



Maximize the safety and carrying capacity of your Open Service Body with an ErgoRack.



### Easy to use

Deploys with only 2 fingers.



### Improve productivity

Deploy or stow in less than 20 seconds.



### Enhance safety

Eliminates slip and fall hazards from climbing on bumper or tire.



### Full control

Control ladder deployment with adjustable hydraulic cylinder



*Driving Safety Forward<sup>TM</sup>*

# ErgoRack

For Open Service Body

**PRIME DESIGN™**

A Safe Fleet Brand



**UXV-211**  
**UVX-211**

Utility Vertical, Side Wall Mount,  
**Left hand:** UXV-211 /  
**Right hand:** UVX-211  
Folding attached handle  
**Weight:** 40 lbs  
**Crossbar Spacing:** 6, 7, 8 feet  
**Mounting surface width (B):** 7"  
**Body Width (A):** N/A  
**Mounting surface Length:** 64-100"



 
**UXV-201**  
**UVX-201**

Utility Vertical, Top Mount  
**Left hand:** UXV-201 /  
**Right hand:** UVX-201  
Folding attached handle  
**Weight:** 38 lbs  
**Crossbar Spacing:** 6, 7, 8 feet  
**Mounting surface width (B):** 12.25"  
**Body Width (A):** N/A  
**Mounting surface Length:** 76-100"




**UXV-203**  
**UVX-203**

Utility Vertical, Top Mount  
**Left hand:** UXV-203 /  
**Right hand:** UVX-203  
Hex drive with removable ratchet handle  
**Weight:** 41 lbs  
**Crossbar Spacing:** 6, 7, 8 feet  
**Mounting surface width (B):** 12.25"  
**Body Width (A):** N/A  
**Mounting surface Length:** 76-100"

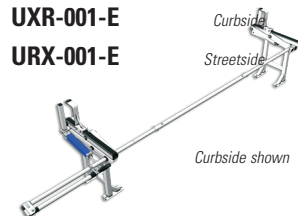


**UXR-001-E**  
**URX-001-E**

 Elevated Utility, Rotation  
**Left hand:** UXR-001-E /  
**Right hand:** URX-001-E  
With Chair Top Mount  
**Weight:** 48 lbs  
**Crossbar Spacing:** 5, 6, 7, 8 feet  
**Mounting surface width (B):** 13"  
**Body Width (A):** N/A  
**Mounting surface Length:** 64-100"

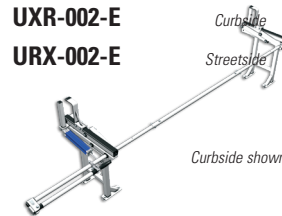

**UXR-002-E**  
**URX-002-E**

 Elevated Utility, Rotation w/short handle  
**Left hand:** UXR-002-E /  
**Right hand:** URX-002-E  
With Chair Top Mount  
**Weight:** 48 lbs  
**Crossbar Spacing:** 5, 6, 7, 8 feet  
**Mounting surface width (B):** 10.5"  
**Body Width (A):** N/A  
**Mounting surface Length:** 64-100"

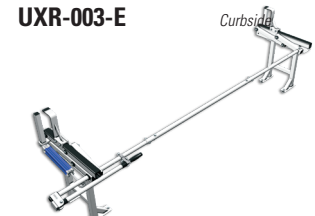

**UXR-003-E**

Elevated Utility, Rotation w/short handle  
**Right hand:** UXR-003-E  
With Chair Top Mount  
**Weight:** 46 lbs  
**Crossbar Spacing:** 6, 7, 8 feet  
**Mounting surface width (B):** 10.5"  
**Body Width (A):** N/A  
**Mounting surface Length:** 76-100"



 
**PRR-0005**

Elevated Utility, Rotation/Rotation,  
Two Crossbars, 76" - US Gen 4,  
RAC 1175/1176 Auto Clamp System  
With Elevated Top Mount  
**Weight:** 104 lbs  
**Crossbar Spacing:** 6, 7, 8 feet  
**Mounting surface width (B):** 13"  
**Body Width (A):** up to 74"  
**Mounting surface Length:** 76-100"



**PCR-0005**

Elevated Utility, Clamp/Rotation,  
Two Crossbars, 76" - US Gen 4,  
RAC 1175/1176 Auto Clamp System  
With Elevated Top Mount  
**Weight:** 100 lbs  
**Crossbar Spacing:** 7 feet  
**Mounting surface width (B):** 13"  
**Body Width (A):** up to 74"  
**Mounting surface Length:** 88"

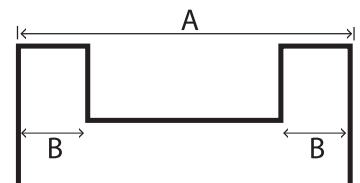

Dimensions for your specific body model are critical to select the correct rack model. Use diagram to help determine which rack is right for your open utility body.

ML-7.2-4066 / Rev B / 02-13-2024

Copyright ©2020 Safe Fleet and its subsidiaries. All rights reserved. No part of this publication may be reproduced by any means without written permission from Safe Fleet. The information in this publication is believed to be accurate. However, Safe Fleet does not make any representation or warranty to that effect and does not assume responsibility for any consequences resulting from use of such information. Revisions or new editions of the publication may be issued (or not issued) in our discretion to incorporate such changes.

1.877.463.7225  
safefleet.net

SAFE FLEET  
Driving Safety Forward™