



FEA-0025 / Extendable Ratchet Handle

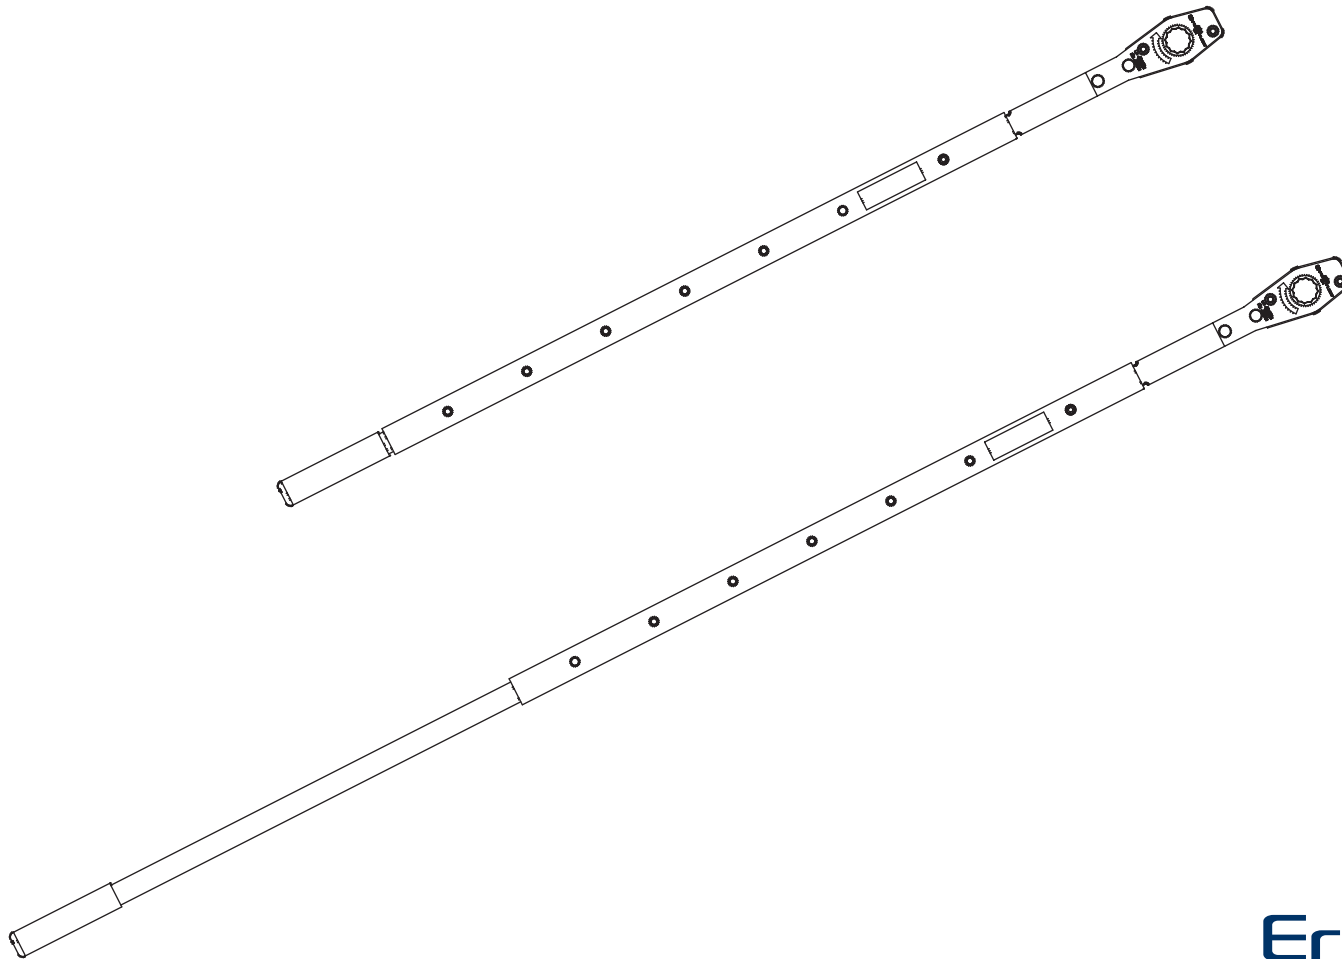




Table of Contents

FEA-0025

General Information

Assembly Requirements..... 1
Extendable Ratchet Handle / FEA-0025 2
Extendable Ratchet Handle Stickers (LH & RH) / FEA-0025)..... 3

System Installation

Extendable Ratchet Handle Stickers (LH & RH) / FEA-0025 4



Assembly Requirements

FEA-0025



INSTALLER NOTE: It is important to correctly follow these assembly instructions. These instructions for assembly are provided by the manufacturer at time of ErgoRack delivery, and reflect the technical specifications applicable at the time of writing.

- These instructions are subject to change if the manufacturer revises the parts and/or production of the subsystems and accessories used in the brand's vehicles. Following the instructions for assembly will ensure proper installation of the product. The manufacturer will not be held liable if these instructions are not followed.
- The addition of parts and/or components not original to this ErgoRack are discouraged. Use only OEM supplied parts.
- Consultation of the OEM vehicle may be required during assembly to avoid vehicle damage. Ensure bolt locations will not damage any critical parts of the vehicle—i.e. gas tank, wiring harnesses, or hoses-before drilling.




INSTALLATION INSTRUCTIONS

ErgoRack

Extendable Ratchet Handle / FEA-0025

ITEM	DESCRIPTION	QTY
1	PRIME DESIGN EUROPE RATCHET	1
2	12 PT. RATCHET WRENCH	1
3	EXTENDABLE HANDLE INR	1
4	ROUND GRIP 1IN ID X 4IN L	1
5	CLEVIS PIN STEEL ZINC .25 IN x 1.5 IN	1
6	ALLEN CAP SCREW, SST M6 X 25MM	1
7	LABEL HANDLE QR CODE	1
8	TUBE, 2.3" x 49"	1

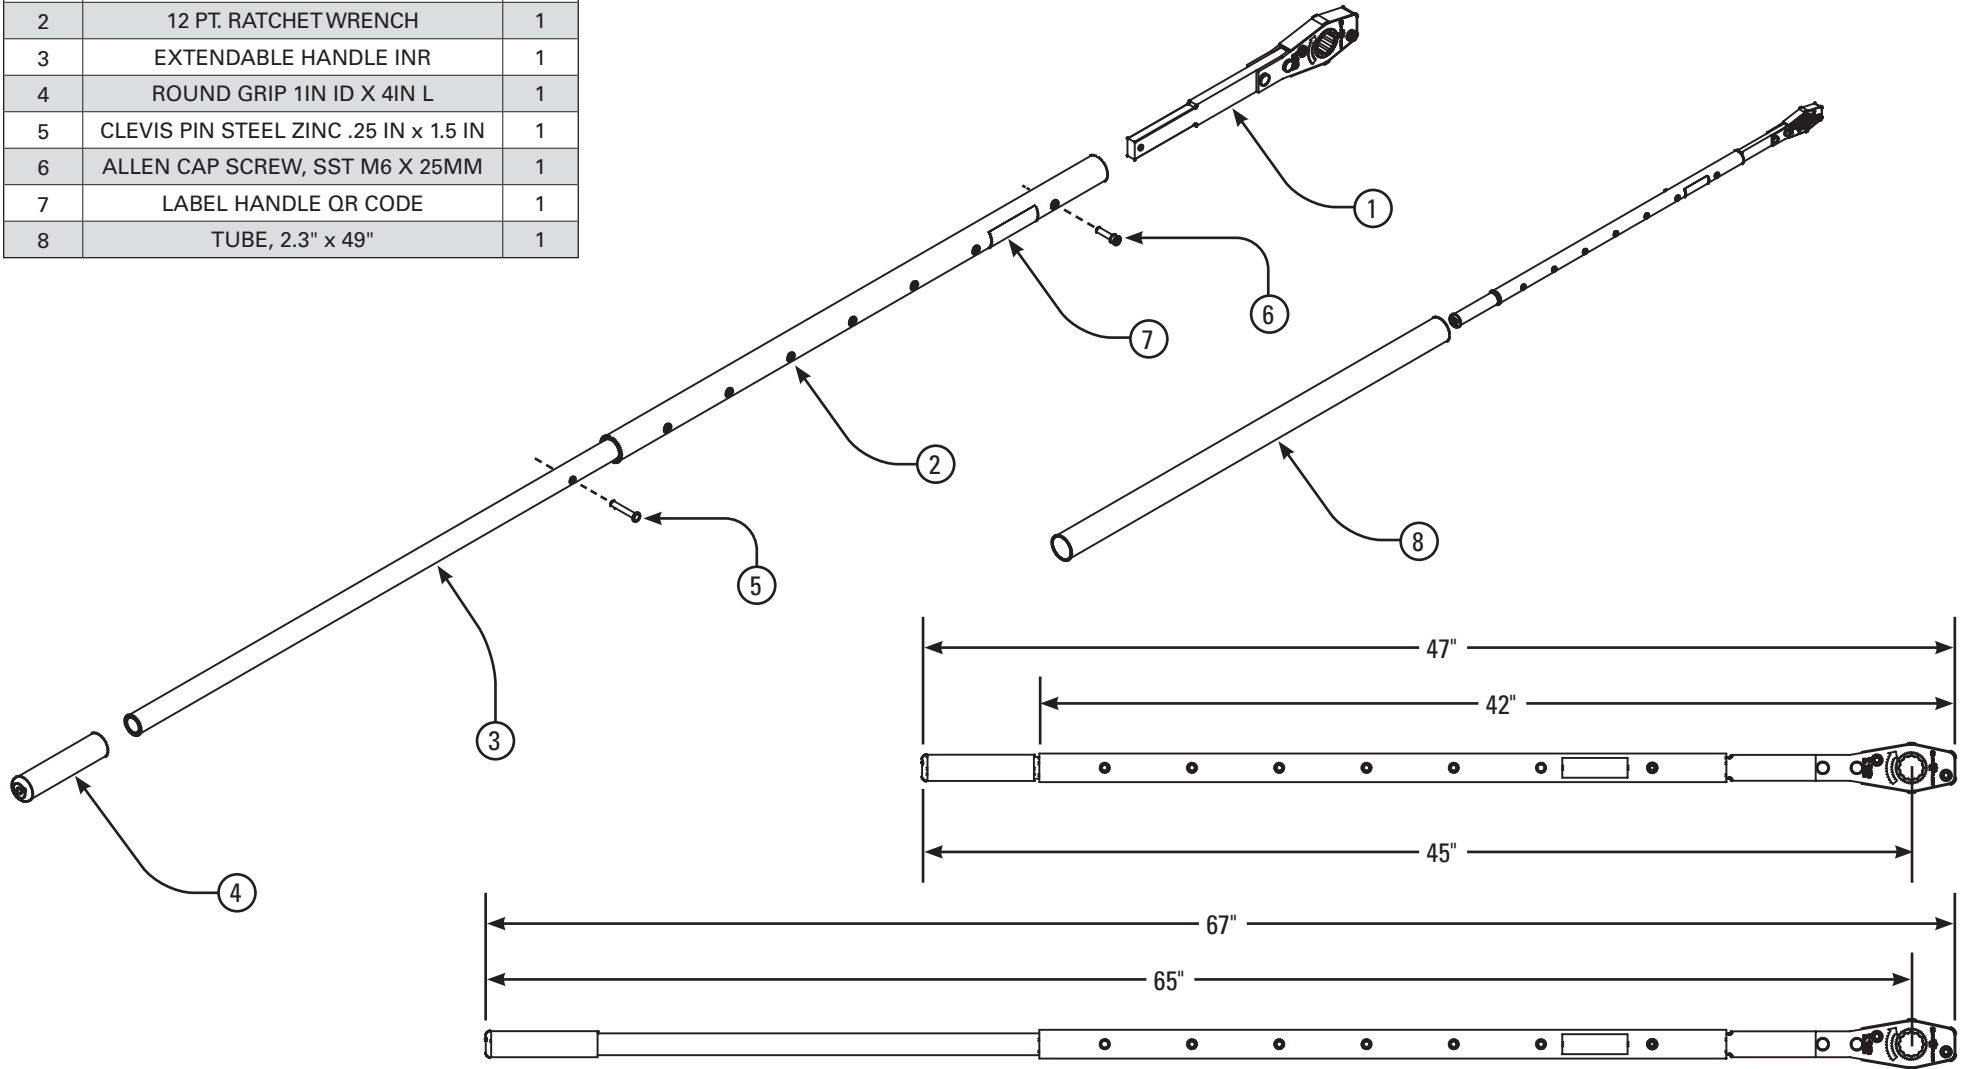




INSTALLATION INSTRUCTIONS

ErgoRack

Extendable Ratchet Handle Stickers (LH & RH) / FEA-0025

ITEM	DESCRIPTION	QTY
1	LEFT HAND & RIGHT HAND DRIVESHAFT DIRECTIONAL STICKERS	1

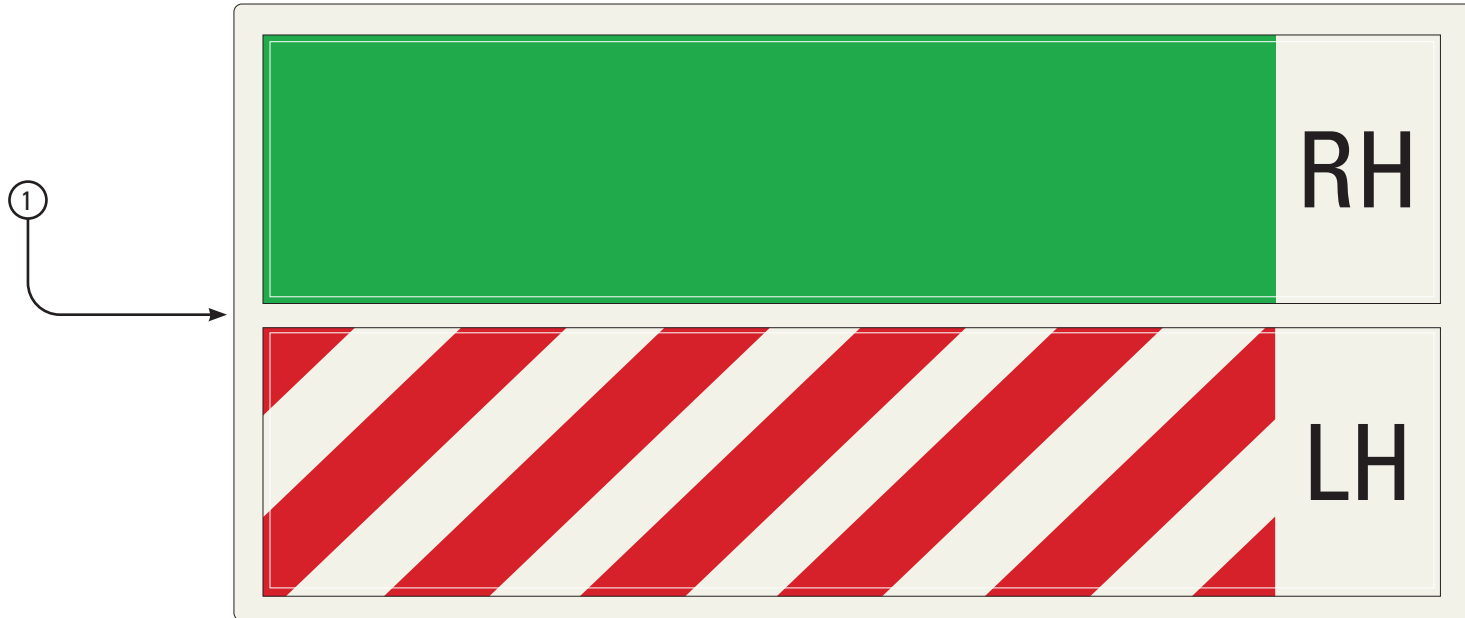


Note: The Driveshaft stickers are included in the box.



INSTALLATION INSTRUCTIONS

Driveshaft - Rotation Sticker Placement

Fig. 1

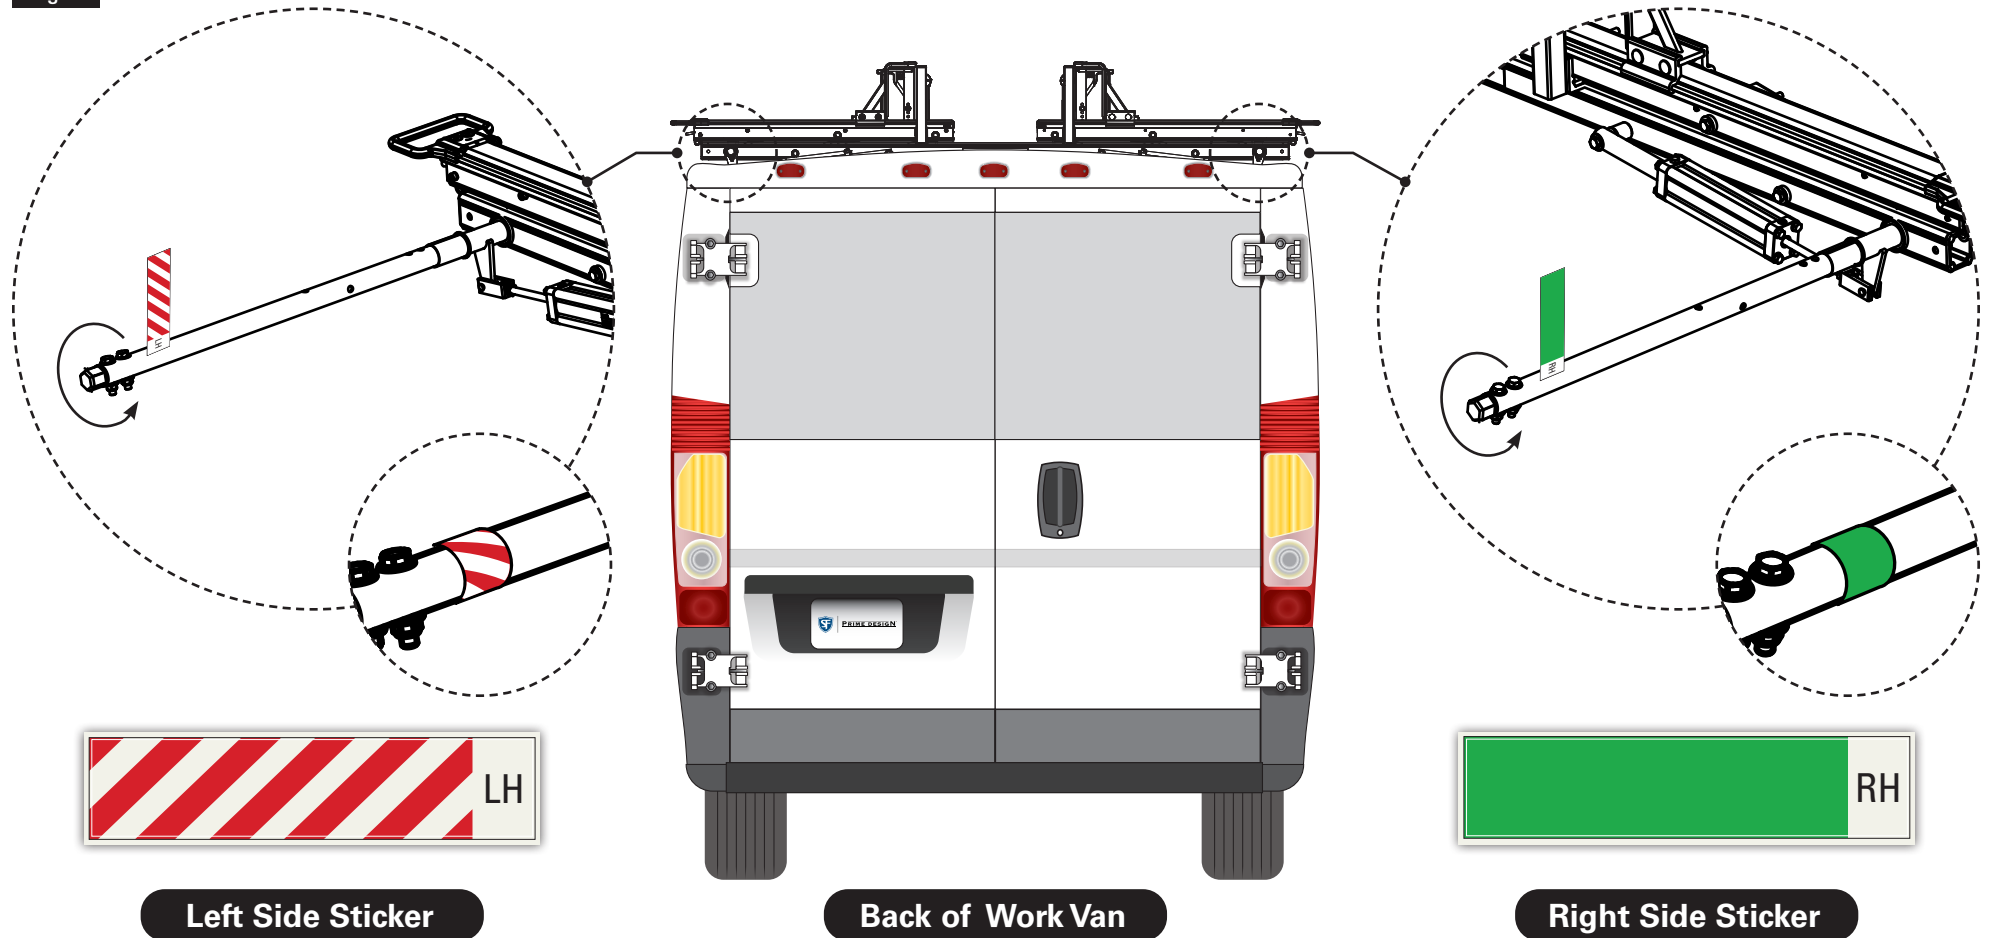

Step 1: Attach the Driveshaft Rotation Directional stickers to the Rotation Shaft on the left and right side of the ErgoRack system (Fig. 1).

Note: There may be configurations where only one sticker may be used.